


Buckle & Webbing

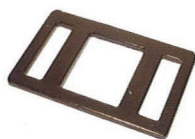

S-lock buckle

Buckle Part no.:

Type:
Breaking strenght kp:
Alt 1: Webbing Part no.
Breaking strenght kp:
Alt 2: Webbing Part no.
Breaking strenght kp:

01803

S-lock buckle, galvaniz
1500
02190S
2300
05090S
3000



Alt 1: LC = 750 kp

Alt 1: LC = 1000 kp

Buckle Part no.:

Type:
Breaking strenght kp:
Alt 1: Webbing Part no.
Breaking strenght kp:
Alt 2: Webbing Part no.
Breaking strenght kp:

01804

S-lock buckle, plastic coated
1500
02190S
2300
05090S
3000

Alt 1: LC = 750 kp

Alt 1: LC = 1000 kp



Hook buckle

Buckle Part no.:

Type:
Breaking strenght kp:
Alt 1: Webbing Part no.
Breaking strenght kp:
Alt 2: Webbing Part no.
Breaking strenght kp:

T02

Hook buckle
5000
08090S
4800
01840
3000



Alt 1: LC = 1600 kp

Alt 1: LC = 1000 kp



Webbing


Part no.:

Type:
Breaking strenght kp:

01835

Webbing in plastic bag, 250 m
2000

Assembly instruction

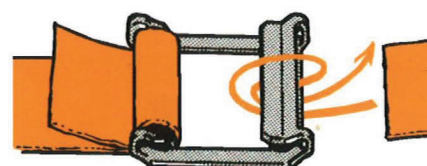

Tools for pretentioning



Part no.:

Type:
 S_{HF} 50 kp =>
Pretentioning force (F_P) =

01810

K-Handel 50 mm

250 kp



Part no.:

Type:
 S_{HF} 50 kp =>
Pretentioning force (F_P) =

681300040

S-Handel 40 mm

500 kp

Part no.:

Type:
 S_{HF} 50 kp =>
Pretentioning force (F_P) =

681300050

S-Handel 50 mm

500 kp



Part no.:

Type:
 S_{HF} 50 kp =>
Pretentioning force (F_P) =

01890

K-Ratchet 50 mm

500 kp



Part no.:

Type:
Pretentioning force (F_P) =

01880

H-tool 50mm
750 kp at 7 bar,
max 7 bar



Our way lashings have a big application area, as on flat bed lorries, at sea port terminals, for bounding wood or tubes and for lashing on pallets.